



MONITOR

USER MANUAL


F27IPX

AEF27IPX

PLEASE READ THIS MANUAL
THOROUGHLY BEFORE USE AND KEEP
IT HANDY FOR FUTURE REFERENCE.

English P.1

بالعربية P.12

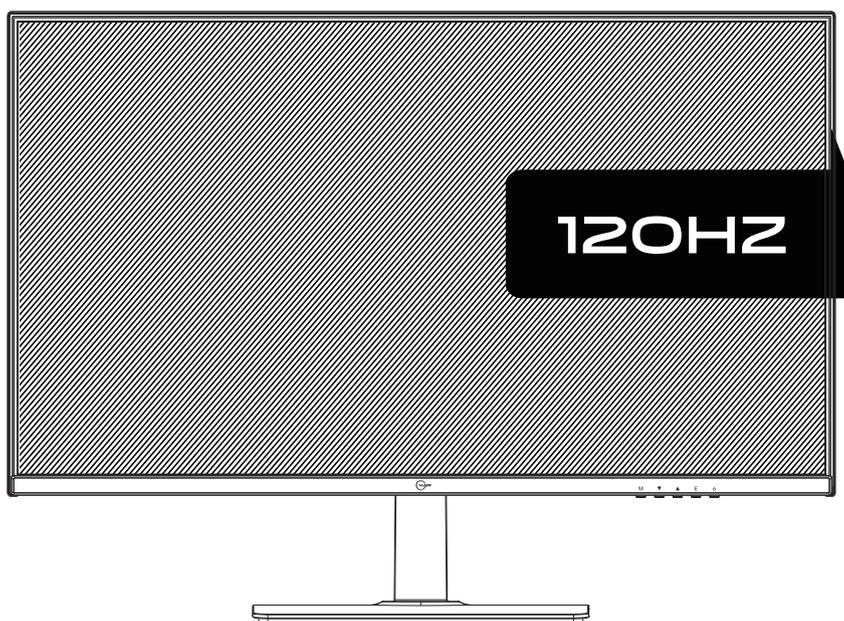

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.

Product introduction

Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.




Monitor




Stand



Base

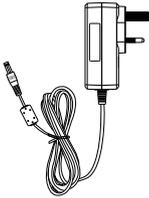

Adapter



Mount hexagon irons x 4
(for wall mounting)



HDMI signal cable




Instructions


- Redundant screws can be used as spare screws.

Installation of base


1. Align the triangular mark on the column with the triangular mark on the base, and rotate it to install it in place, as shown in the figure.

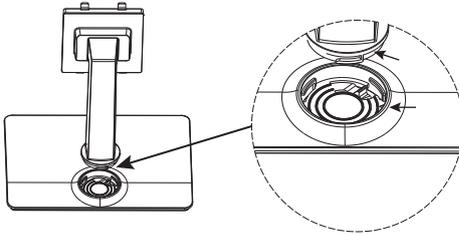

2. Insert the assembled stand into the monitor

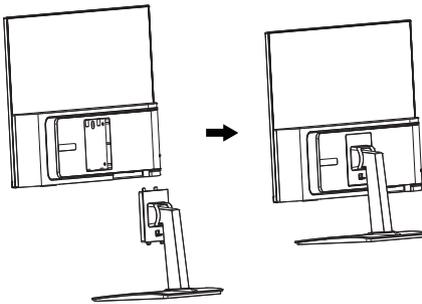


3. After assembly, simply hold the stand with hand to stand the monitor upright.

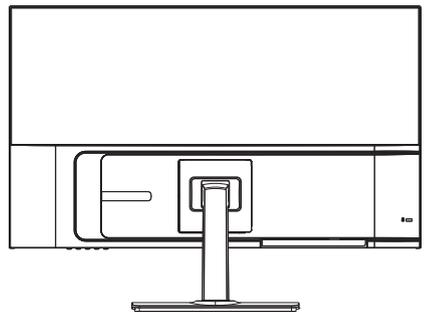


 Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

Installation of mount (optional)

1. Take out the stand stem and stand base . Press the release button to remove the stand plate.

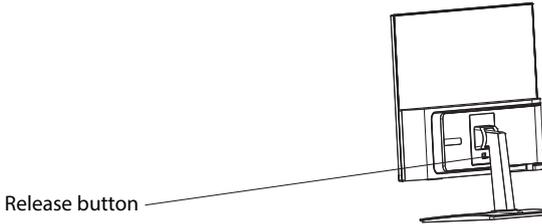


2. Keep the foam under the panel to prevent it from breaking. Remove the four original screws attached to the opening located on the back of the monitor (1). Install the four hexagonau bolts in the upper position and 2 in the lower position (2).

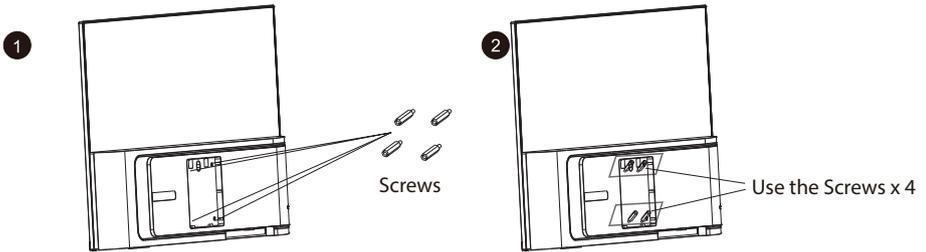


3. Follow the instructions of your wall mount or other similar accessories to install the monitor on it.

Note: the compatible wall support must have the VESA fixing holes spaced some of the Others of 75x75 mm vertically and horizontally.

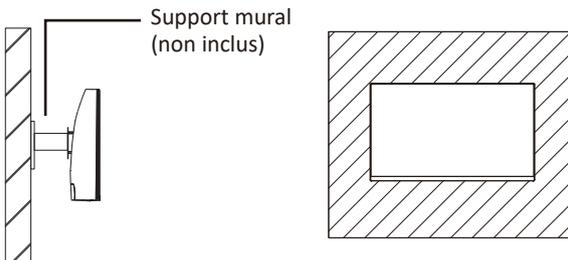

! CAUTION: To reduce the risk of falls, install the wall shelf properly and take screen safety measures to avoid injury or damage. Do not place anything on or hang anything from the wall bracket. The recommended height of the wall bracket should not exceed two meters.


Adjusting the monitor

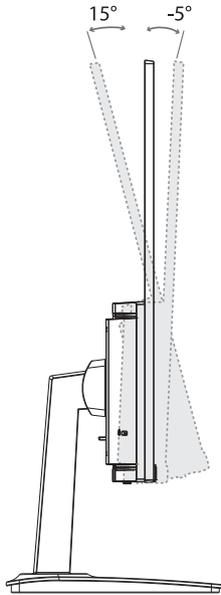

Tilting Angle

$-5.0^{\circ}(\pm 2.0^{\circ}) - +15^{\circ}(\pm 2.0^{\circ})$


Description of buttons

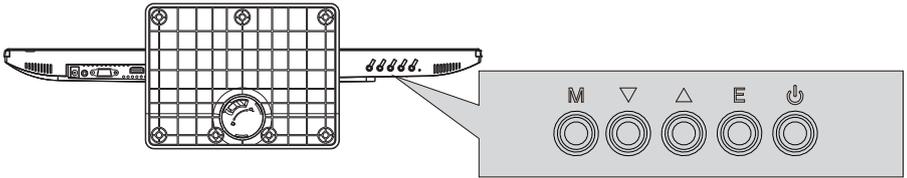

Usage of multifunctional button control key


▲	Plus key	Move the selection upwards / Increase the value (Also as FPS mode hotkey)
▼	Reduce key	Move the selection downwards / Reduce the value(Also as adjust signal key)
E	Exit key	Return to the previpus level menu or exit the OSD menu(Also as Game Crosshair hotkey)
M	Menu	Pop up the menu, or confirm the selection
⏻	Power Button	Press the pop-up menu lightly to turn off the display

Explanation of indicators

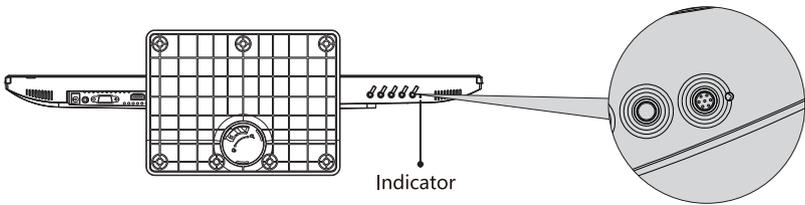

Indicator: Steady blue light indicates the power is on and the monitor runs normally. Steady red light indicates no video source and no horizontal or vertical signal detected or low voltage. Please make sure your computer is turned on and all video cables are fully plugged in and/or connected.

Cable connection:

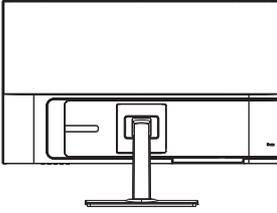


* The bottom interface configuration at the back of the monitor varie with products.

* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

HDMI interface




Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.

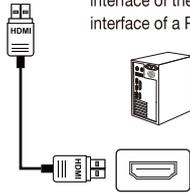

VGA interface




Use a VGA cable to connect the VGA interface of the product to the VGA interface of the PC.

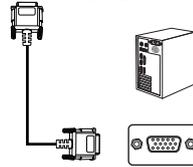

AUDIO OUT



Connect audio outputting devices such as earphones to the AUDIO OUT interface.

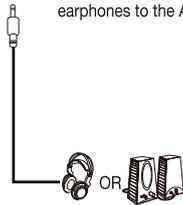

Power Adapter




Please connect the power adapter to the power adapter interface of a PC, and plug the other end of the power cable into the power socket.



Menu description

- The color and shape of the OSD menu of the actual computer may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

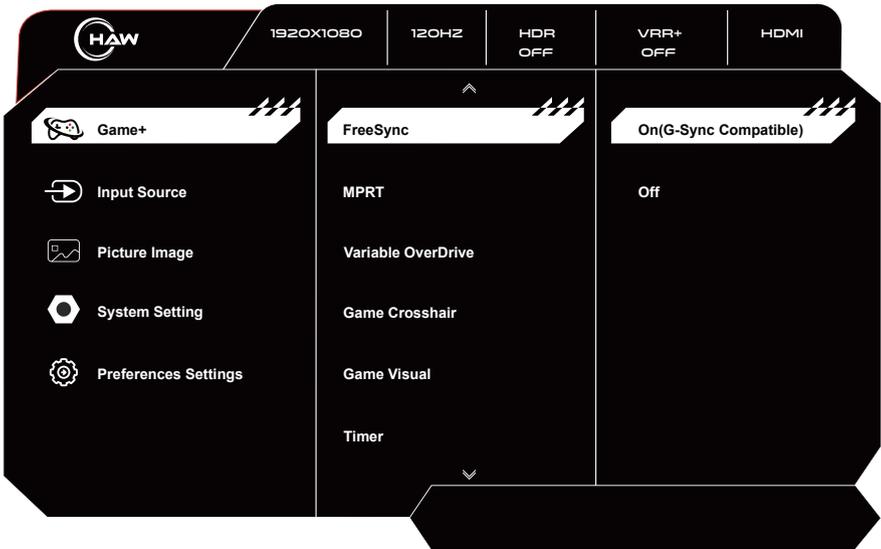


Button	Function
1	Menu: Press to display OSD menu and enter sub-menus
2	Down: Press to move down in menus
3	Up: Press to move up in menus
4	Exit: Press to exit OSD menu
5	Power: Press to turn monitor on/off

- Functions of the monitor vary with models, and the functions in this manual are for reference only.

Game+	FreeSync	On(G-Sync Compatible)/Off
	MPRT	On/Off
	Variable OverDrive	Off/High/Medium/Low
	Game Crosshair	Off/Mode 1/Mode 2/Mode 3
	Game Visual	Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader
	Timer	Off/30/50/60/90
	Game Light	On/Off
	VRR	On/Off
	FPS Counter	On/Off
Shadow boost	0-100	
Input Source	VGA /HDMI	
Picture Image	Brightness	0-100
	Contrast	0-100
	HDR	On/Off
	DCR	On/Off
	Gamma	1.8/2.0/2.2/2.4/2.6
	Color Temperature	Normal/Warm/Cool/User
	Sharp pixel	0-100
	Low Blue Light	0-100
System Setting	Hue	0-100
	Saturation	0-100
	Language	8 country
	Audio	Volume/Mute
	Menu settings	OSD Transparency/OSD Time Out/OSD H-Position/OSD V-Position/OSD Rotation
	Aspect Ratio	wide screen/4:3
Preferences settings	Monitor Info	Model/Color depth/Color mode/RGB/Game Visual/FW
	Reset	
	ECO Mode	On/Off
	Power Indicator	On/Off
	Shortcut setting	UP Key(FPS Counter)/DownKey(Input)/Exit Key(Game Crosshair) List: Brightness/Contrast/Game Crosshair/Game Visual/FPS Counter/Volume/Input)
VGA setting	H Position/V Position/Clock/Phase/Auto Config/Auto Color	

Basic parameters

Product Name	27 inches Gaming monitor	
Screen Size	27 inches	
Aspect Ratio	16:9	
Viewing Angle	178°(H) / 178°(V)	
Display Area (H*V)	597.888(H) x 336.312(V)mm	
Contrast ratio	1000: 1 (TYP)	
Colors	16.7M	
Resolution	1920x1080	
Maximum refresh rate	120Hz	
Power specifications	DC 12V --- 3A The standard voltage and current may vary with countries, please refer to the label at the back of the product.	
Tilting angle	Forward titling: 5°±2°; Backward tilting: 15°±2°	
Height range	N/A	
Rotation angle	N/A	
Vertical angle	N/A	
Environmental conditions	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
	Storage	Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)

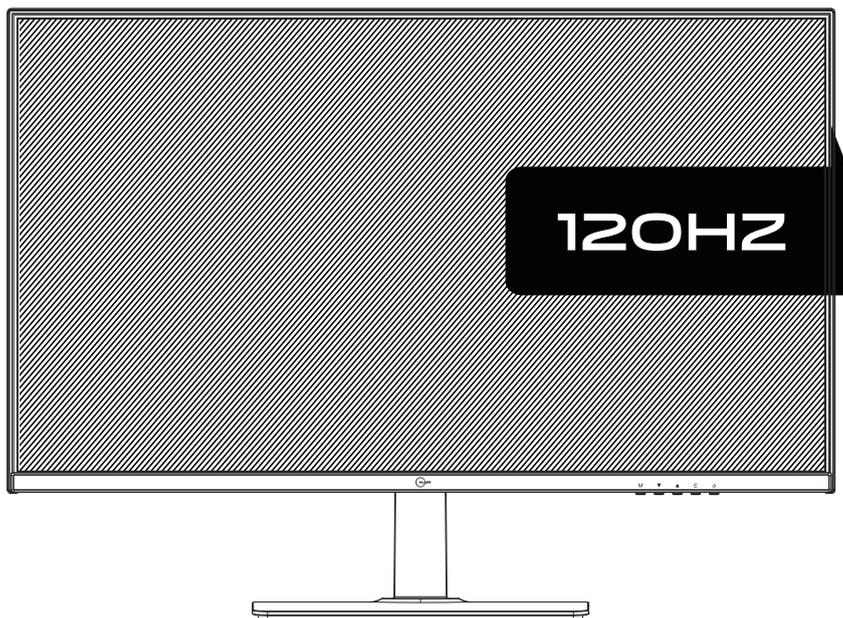

قبل استخدام هذا المنتج، يرجى قراءة ما يلي
دليل المستخدم بعناية واحتفظ به جيداً

- احفظ الشاشة بعيداً عن مصادر المياه أو الأماكن الرطبة، مثل غرف الاستحمام والمطابخ والطوابق السفلية و
أحواض السباحة
- تأكد من وضع الشاشة على سطح مستوي. إذا سقطت الشاشة، فقد يتسبب ذلك في إصابة الإنسان أو تلف الجهاز
- قم بتخزين الشاشة واستخدامها في مكان بارد وجاف وجيد التهوية، واحفظها بعيداً عن مصادر الانبعاثات والحرارة
- لا تقم بتغطية أو سد فتحة التهوية في الغلاف الخلفي، ولا تستخدم المنتج على سرير أو أريكة أو بطانية أو أشياء مماثلة
- تتم طباعة نطاق جهد إمداد الشاشة على الملصق الموجود على الغلاف الخلفي. إذا كان من المستحيل تحديد جهد الإمداد، يُرجى
استشارة الموزع أو شركة الطاقة المحلية
- إذا لم يتم استخدام الشاشة لفترة طويلة، يُرجى قطع التيار الكهربائي لتجنب حدوث صدمة كهربائية في الأيام الممطرة
والتلف بسبب جهد الإمداد غير الطبيعي
- يُرجى استخدام مقبس تأريض موثوق به، ولا تفرط في تحميل المقبس وإلا تسبب ذلك في نشوب حريق أو صدمة كهربائية
- لا تضع مواد غريبة في الشاشة، وإلا فقد يتسبب ذلك في حدوث ماس كهربائي ينتج عنه حريق أو صدمة كهربائية
- لا تقم بفك هذا المنتج أو إصلاحه بنفسك لتجنب حدوث صدمة كهربائية. في حالة حدوث أعطال، يرجى الاتصال ب
خدمة ما بعد البيع مباشرة
- لا تقم بسحب كابل الطاقة أو لفه بقوة
- توجد طبقة مستقطبية (ليست طبقة واقية) على سطح الشاشة. لا تقم بنزعها، وإلا فإن المنتج
قد تتعرض للتلف ويصبح الضمان غير صالح

قائمة التعبئة

- يرجى التحقق من أن عبوة الشاشة تحتوي على جميع الأجزاء. في حالة فقدان أي جزء، يرجى الاتصال بالموزع.
- قد يختلف لون وشكل الأجزاء باختلاف الطرازات. الأرقام الواردة في دليل المستخدم هذا هي للإشارة فقط.
- قد تختلف الأسلاك المزودة مع المنتجات المشتراة. الأرقام الواردة في دليل المستخدم هذا هي للإشارة فقط.



القاعدة




قف




الشاشة



كابل HDMI



ركب المكونات السداسية الأضلاع × 4 (للتكيب بالحائط)

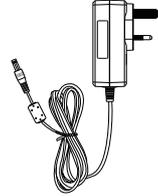

المحول




التعليمات


يمكن استخدام البراغي الزائدة عن الحاجة كبراغي احتياطية.

تركيب القاعدة


1 قم بمحاذاة علامة المثلث الموجودة على العمود مع علامة المثلث الموجودة على القاعدة، ثم قم بتدويره لتركيبه في مكانه الصحيح، كما هو موضح في الشكل.

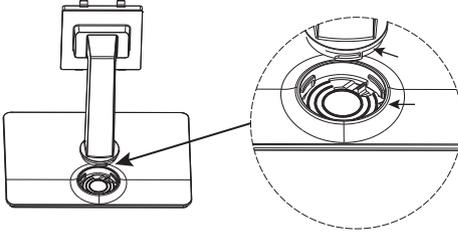

2. M4*10. قم بتثبيت قاعدة الحامل في الحامل باستخدام برغي واحد

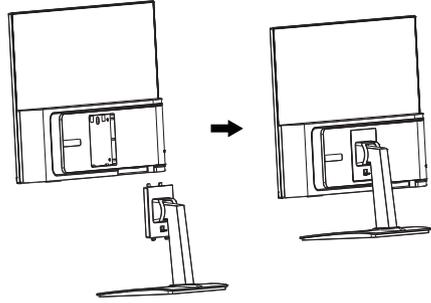


بعد التجميع، ما عليك سوى إمساك الحامل باليد لتثبيت الشاشة في وضع مستقيم

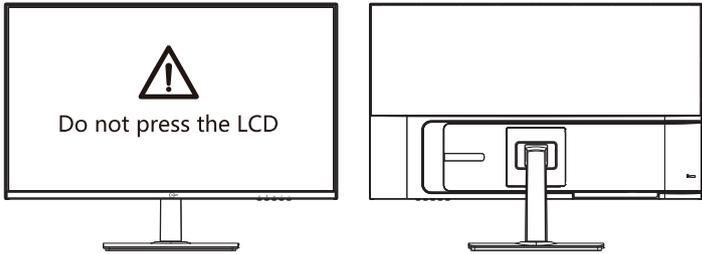

⚠ ملاحظة: أثناء وقوف الشاشة بالكامل، لا تضغط على الشاشة البلورية السائلة باليد لتجنب تلف الشاشة.


تركيب الحامل (اختياري)

1. أخرجي جذع الحامل وقاعدة الحامل . اضغط على زر التحرير لإزالة لوحة الحامل.

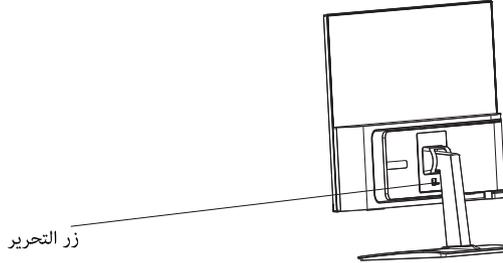


2. احتفظ بالرغوة تحت اللوحة لمنعها من الانكسار. انزع البراغي الأربعة الأصلية.
(1) متصلة بالفتحة الموجودة في الجزء الخلفي من الشاشة
(2) قم بتركيب البراغي السداسية الأربعة في الموضع العلوي و2 في الموضع السفلي

1

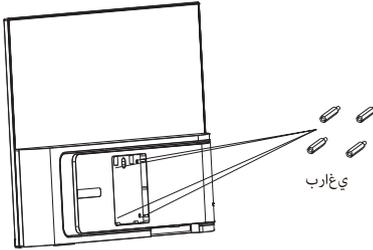


2

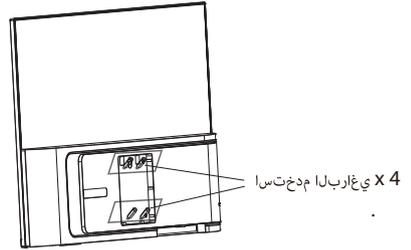


3. اتبع الإرشادات المدونة على حامل الحائط أو أي ملحق مشابه لتثبيت الشاشة عليه.

متباعدة بعض VEsa fixing ملاحظة: يجب أن تحتوي الدعامة الجدارية المتوافقة على فتحات
مم عمودياً وأفقياً. الشيء عن الأخرى من 75x75

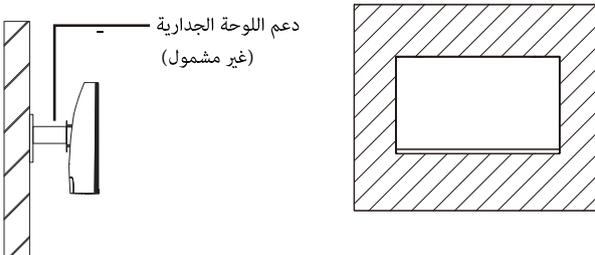


⚠ تنبيه: لتقليل خطر السقوط، قم بتركيب الرف الحائطي بشكل صحيح واتخذ تدابير السلامة على الشاشة لتجنب الإصابة أو التلف. لا تضع أي شيء على حامل الحائط أو تعلق أي شيء عليه. يجب ألا يتجاوز الارتفاع الموصى به لحامل الحائط مترين.

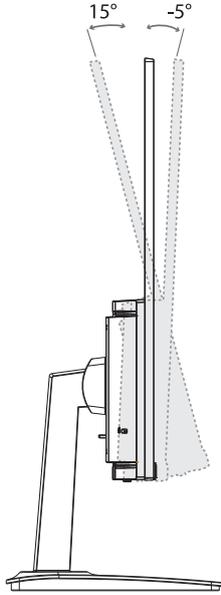

زاوية الميل

$-5.0^{\circ}(\pm 2.0^{\circ}) - +15^{\circ}(\pm 2.0^{\circ})$


وصف الأزرار

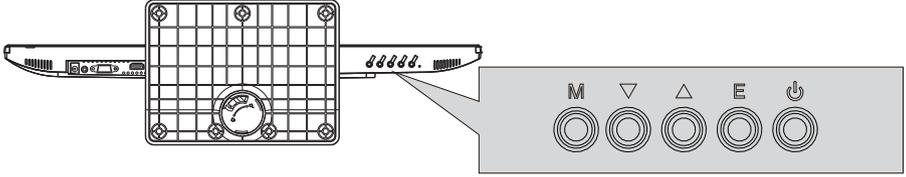

اختصارات لاستخدام الأزرار متعددة الوظائف

انقل الاختيار لأعلى/قم بزيادة القيمة (أيضا كمفتاح اتصال وضع	مفتاح إضافي	▲
قم بتحريك الانتقاء إلى الأسفل / قلل القيمة (كما هو الحال مع مفتاح ضبط الإشارة)	تصغير المفتاح	▼
OSD قائمة نم ج ووخ ل ا و ق با س ل ا ي و ت س م ل ا ة م ئ ا ق و ل ا ة د و ع ل ا (باع ل ا ل ا ي ف ع ط ا ق ت م ل ا ط ع ل ع ي ر س ل و ص و ح ا ت ف م ا ه ن ا ا م ك)	مفتاح الإغلاق	E
افتح القائمة، أو تأكيد الاختيار	القائمة	M
تشغيل/إيقاف تشغيل ف ا ق ي ا ل ق ف ر ب ة ق ت ب ن م ل ا ة م ئ ا ق ل ا ي ل ع ط غ ض ا	زر الطاقة	⏻

تفسير المؤشرات

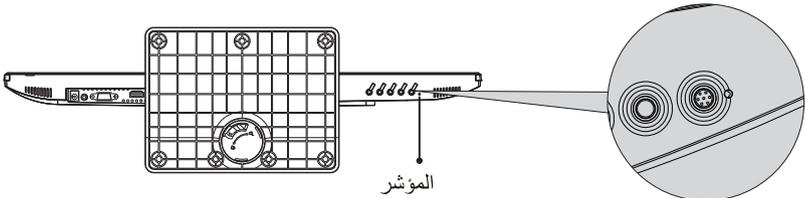


المؤشر: يشير الضوء الأزرق الثابت إلى أن الطاقة قيد التشغيل وأن الشاشة تعمل بشكل طبيعي. يشير الضوء الأحمر الثابت إلى عدم وجود مصدر فيديو وإلى عدم اكتشاف إشارة أفقية أو عمودية أو انخفاض الجهد. يرجى التأكد من تشغيل الكمبيوتر ومن إدخال و/أو توصيل كافة كبلات الفيديو بالكامل.

توصيل الكابل

يختلف تكوين الواجهة السفلية في الجزء الخلفي من الشاشة باختلاف المنتجات.

ملاحظة: في حالة تلف كابل الطاقة أو كابل الإشارة، يجب استبداله بكابلات ناعمة خاصة أو مكونات خاصة يتم شراؤها من قسم التصنيع أو الصيانة.

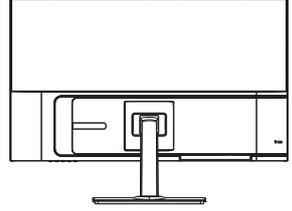

HDMI واجهة




VGA واجهة



Power Adapter




مخرج الصوت

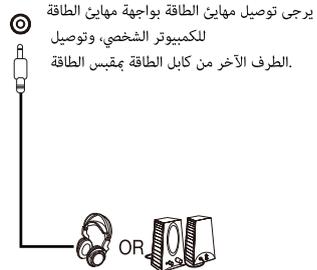

وصف القائمة

- للكمبيوتر الفعلي مختلفاً قليلاً عن تلك الموضحة في الشكل OsD قد يكون لون وشكل قائمة
- مع إدخال تحسينات على الوظائف دون إشعار مسبق OsD قد تتغير مواصفات قائمة لضبط إعدادات الشاشة وتظهر على الشاشة بعد تشغيل الشاشة (OsD) يمكن استخدام قائمة عرض الشاشة M. تشغيل الشاشة والضغط على الزر

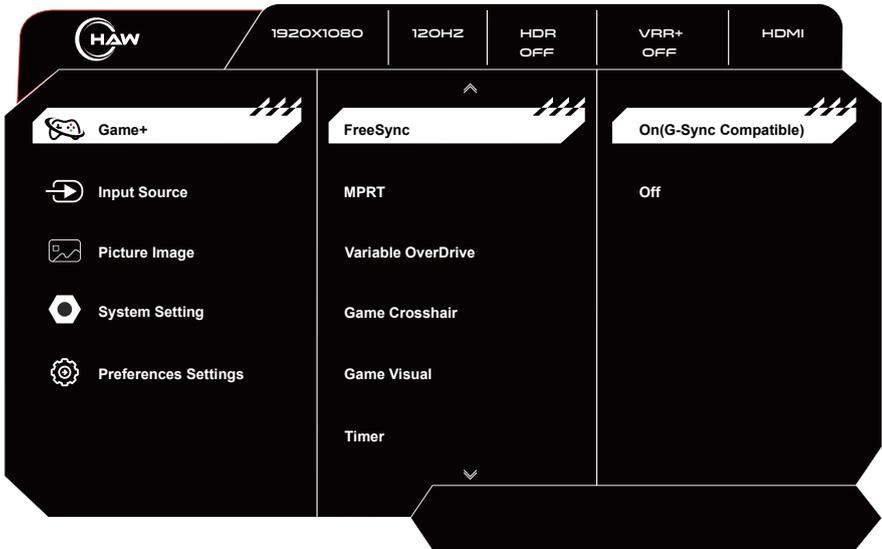

رذ	ة في طولها
1	ة يعرفها مئ اوقلا لا اءءو ةشاشلا ىلع ةضورءملا تارايءلا ةمئاق ضرءل رزلا اءه ىلع طءءضا :ةمئاقلا
2	مئ اوقلا ىف لفسأل ك رءءلل طءءضا :لفسأ
3	مئ اوقلا ىف ىلعأ ك رءءلل طءءضا :ىلعأ
4	ةشاشلا ىلع ةضورءملا تارايءلا ةمئاق نءم ءورءلل رزلا اءه ىلع طءءضا :ءورء
5	ءءل ءءء فاقىءا ءا ءشاشلا لىء ءءءلل طءءضا :لىء ءءءلا

- تختلف وظائف الشاشة باختلاف الموديلات، والوظائف الواردة في هذا الدليل هي للرجوع إليها فقط

المزامنة الحرة	ليغيتا فاقي (القياسات G-Sync) ليغيت	+ اللعبة
MPRT	تشغيل/إيقاف تشغيل	
ريغتم زواجت لدعم	ضفغخم/طسوتم/عفترم/فاقي!	
لعبة تقاطع الشعاع المتقاطع	إيقاف التشغيل/وضع الإيقاف 1/وضع 1/الوضع 2/وضع 3	
لعبة بصريّة	قياسي/فيلم/العلم سينمائي/لعبة تقمص الأدوار/لعبة تقمص الأدوار/منظور من منظور الشخص الأول/مكتب المدقق/قارئ	
موقت	من 90/60/50/30/30	
إضاءة اللعبة	تشغيل/إيقاف تشغيل	
VRR	تشغيل/إيقاف تشغيل	
FPS عداد	تشغيل/إيقاف تشغيل	
لالظلا زي زعت	0-100	
مصدر الإدخال	VGA /HDMI	مصدر الإدخال
السطوع	0-100	
التباين	0-100	
HDR	تشغيل/إيقاف تشغيل	
DCR	تشغيل/إيقاف تشغيل	
جاما	1.8/2.0/2.2/2.4/2.6	
درجة حرارة اللون	عادي/داقن/بارد/بارد/مستعمل	
بكسل حاد	0-100	
ضوء أزرق منخفض	0-100	
هوي	0-100	
التشيع	0-100	مظنلا دادع!
اللغة	بالل 8	
الصوت	مك / توص	
ةمئاقلا تادادع!	OSD نارود / يسار / OSD فقوم / يقفأ OSD فقوم / OSD ماهوتنا تقور / OSD يقفأش	
نسبة العرض إلى الارتفاع	شاشة عرضة 4:3	
مربعمولتا تامولعم	FW / شبعاللا يرضب / رضبالا قورزلا رضبالا / نوللا رضو / نوللا قمج / جومون	
إعادة تعيين		
وضع ECO	تشغيل/إيقاف تشغيل	
مؤشر الطاقة	تشغيل/إيقاف تشغيل	
تالي ضفتلا تادادع!	راصتخال تادادع!	
	ر اصتخال تادادع! / (لاخدال) لفسألا حاتقم / (ةي نائل ي ف تاراطال رشؤم) يلعال حاتقم (ةب علل ا مداصتقم) ج وورخال حاتقم / تاراطال رشؤم / (ةب علل ا يرضب / (ةب علل ا مداصتقم / رطان تال / عوطسلا :ةمئاق لاخدال / يوتسملا / (ةي نائل ي ف الساعة/المرحلة/التهيئة التلقائية/اللون التلقائي) V/الوضع H/الوضع	
VGA إعداد ال		

اسم المنتج	شاشة ألعاب بحجم 27 بوصة	
حجم الشاشة	بوصة 27	
نسبة العرض إلى الارتفاع	16:9	
زاوية المشاهدة	درجة مئوية (ح) / 178 درجة مئوية (ت) 178	
(H ⁰ V) مساحة العرض	مليمتر 597.888(H)X336.312(V)	
نسبة التباين	(نموذج) 1000:1	
الألوان	16.7M	
القرار	1920x1080	
الحد الأقصى لمعدل التحديث	هرتز 120	
مواصفات الطاقة	فولت 3 أمبير DC 12 قد يختلف الجهد والتيار القياسيان باختلاف البلدان، يرجى الرجوع إلى الملصق الموجود خلف المنتج	
زاوية الميل	°إمالة للأمام 15 ± °2؛ الإمالة للخلف: 5 ± 2	
نطاق الارتفاع	غير متوفر	
زاوية الدوران	غير متوفر	
الزاوية الرأسية	غير متوفر	
البيئة الشرط	الإجراء	درجة الحرارة: 0 درجة مئوية إلى 40 درجة مئوية (32 درجة فهرنهايت إلى 104 درجة فهرنهايت) الرطوبة: 10% - 90% رطوبة نسبية (بدون تكاثف)
	التخزين	درجة الحرارة: 20- درجة مئوية إلى 60 درجة مئوية (-4 درجة فهرنهايت إلى 140 درجة فهرنهايت) الرطوبة: 5% - 95% رطوبة نسبية (بدون تكاثف)



深圳市微领客科技有限公司

料号： 210-27N11A-002005

名称： 说明书

版本： V1 日期： 20251127

技术要求：

- 1、80g书写纸
- 2、尺寸：140x210mm；
- 3、单黑印刷，骑马钉；
- 4、不得有缺页，漏印，字迹模糊；
- 4、符合RoHS标准。