



MONITOR

USER MANUAL


Q27IPY1

AEQ27IPY1

PLEASE READ THIS MANUAL
THOROUGHLY BEFORE USE AND KEEP
IT HANDY FOR FUTURE REFERENCE.

English P.1

بالعربية P.12

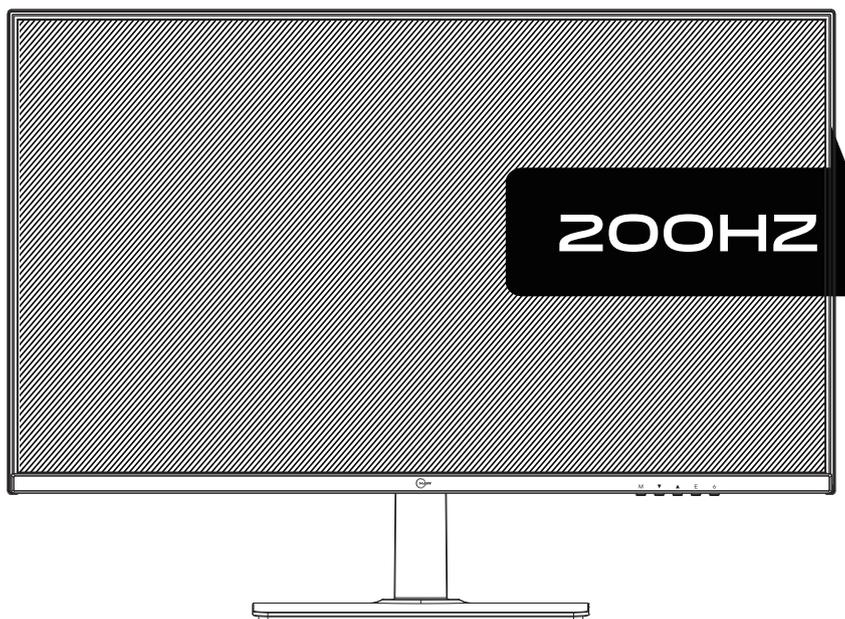

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.

Product introduction

Packing list


- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.




Monitor




Stand

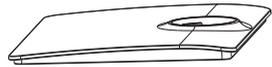

Base

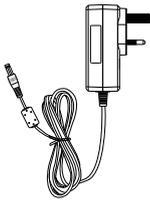

Adapter

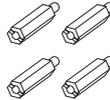

Mount hexagon irons x 4
(for wall mounting)



DP signal cable




Instructions


- Redundant screws can be used as spare screws.

Installation of base


1. Align the triangular mark on the column with the triangular mark on the base, and rotate it to install it in place, as shown in the figure.

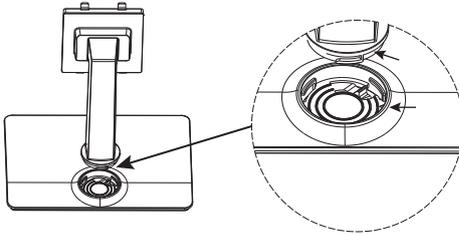

2. Insert the assembled stand into the monitor

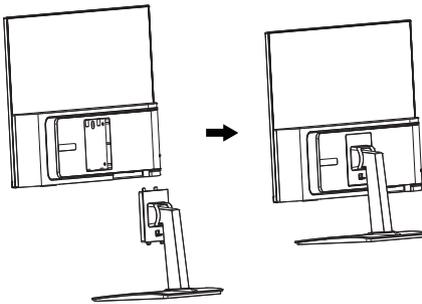


3. After assembly, simply hold the stand with hand to stand the monitor upright.

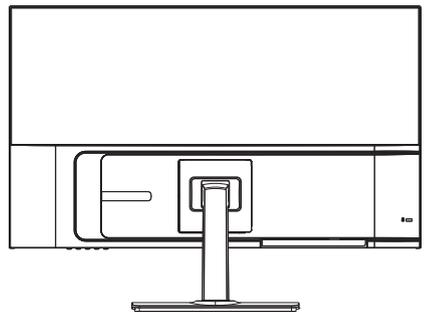


! Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

Installation of mount (optional)

1. Take out the stand stem and stand base . Press the release button to remove the stand plate.

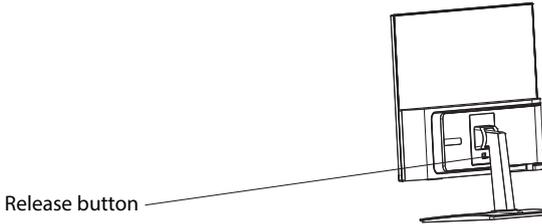


2. Keep the foam under the panel to prevent it from breaking. Remove the four original screws attached to the opening located on the back of the monitor (1). Install the four hexagonau bolts in the upper position and 2 in the lower position (2).

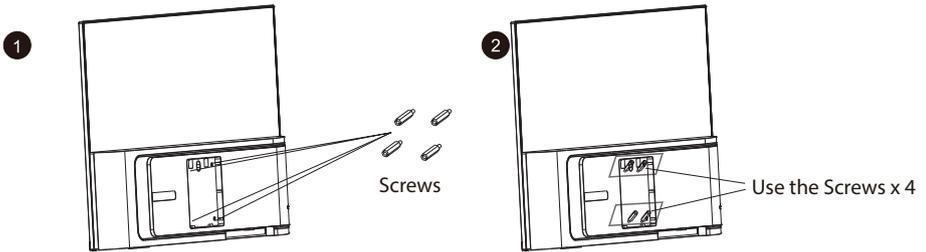


3. Follow the instructions of your wall mount or other similar accessories to install the monitor on it.

Note: the compatible wall support must have the VESA fixing holes spaced some of the Others of 75x75 mm vertically and horizontally.

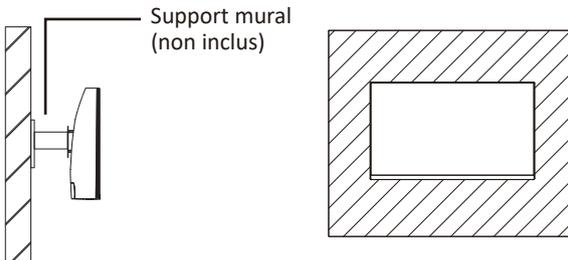

⚠ CAUTION: To reduce the risk of falls, install the wall shelf properly and take screen safety measures to avoid injury or damage. Do not place anything on or hang anything from the wall bracket. The recommended height of the wall bracket should not exceed two meters.


Adjusting the monitor

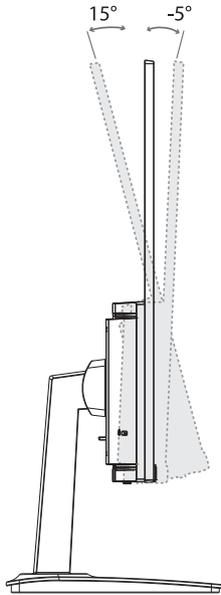

Tilting Angle

$-5.0^{\circ}(\pm 2.0^{\circ}) - +15^{\circ}(\pm 2.0^{\circ})$


Description of buttons

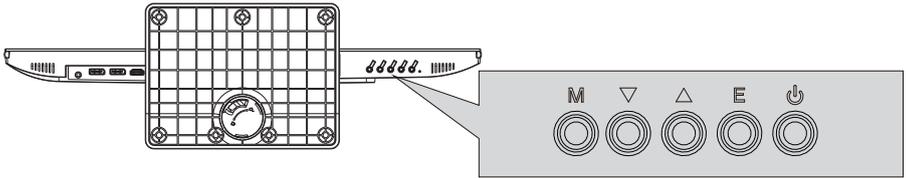

Usage of multifunctional button control key


▲	Plus key	Move the selection upwards / Increase the value (Also as adjust brightness)
▼	Reduce key	Move the selection downwards / Reduce the value (Also as Game Crosshair hotkey)
E	Exit key	Return to the previous level menu or exit the OSD menu (Also as FPS mode hotkey)
M	Menu	Pop up the menu, or confirm the selection
⏻	Power Button	Press the pop-up menu lightly to turn off the display

Explanation of indicators

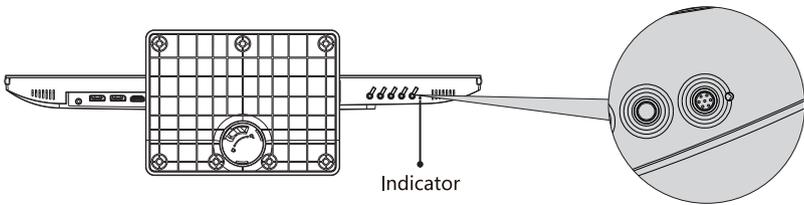

Indicator: Steady blue light indicates the power is on and the monitor runs normally. Steady red light indicates no video source and no horizontal or vertical signal detected or low voltage. Please make sure your computer is turned on and all video cables are fully plugged in and/or connected.

Cable connection:

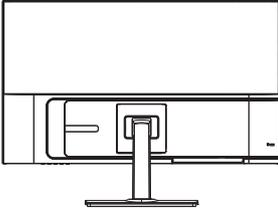


* The bottom interface configuration at the back of the monitor varie with products.

* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

HDMI interface




Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.

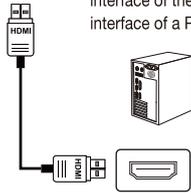

DP interface




Use a DP cable to connect the DP interface of the product to the DP interface of the PC.

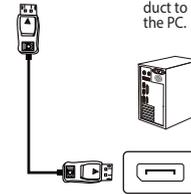

AUDIO OUT



Connect audio outputting devices such as earphones to the AUDIO OUT interface.

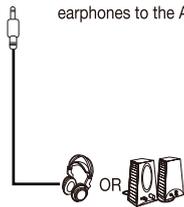

Power Adapter




Please connect the power adapter to the power adapter interface of a PC, and plug the other end of the power cable into the power socket.



Menu description

- The color and shape of the OSD menu of the actual computer may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

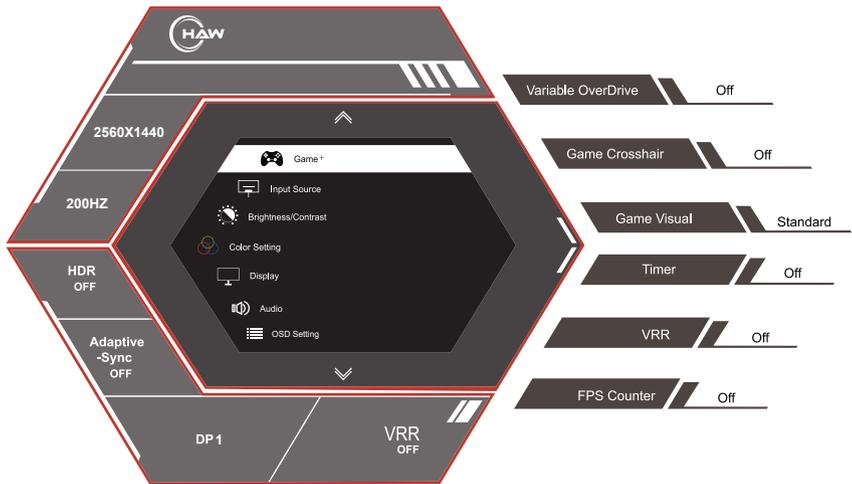


Button	Function
1	Menu: Press to display OSD menu and enter sub-menus
2	Down: Press to move down in menus
3	Up: Press to move up in menus
4	Exit: Press to exit OSD menu
5	Power: Press to turn monitor on/off

- Functions of the monitor vary with models, and the functions in this manual are for reference only.

Game+	Variable OverDrive	Off/High/Medium/Low
	Game Crosshair	Off/Mode 1/Mode 2/Mode 3
	Game Visual	Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader
	Timer	Off/30/50/60/90
	VRR	On/Off
	FPS Counter	On/Off
	Game Light	On/Off
Input Source	DP	
	DP	
	HDMI	
	HDMI	
Brightness /Contrast	Brightness	0-100
	Black Equalizer	0-100
	Contrast	0-100
	DCR	On/Off
Color Setting	Gamma	1.8/2.0/2.2/2.4/2.6
	Color Temperature	Warm/Normal/Cool/User
	Hue	0-100
	Saturation	0-100
	Low Blue Light	0-100
	Sharpness	0-100
Display	Aspect Ratio	wide screen/4:3/1:1/Auto
Audio	Mute	On/Off
	Volume	0-100
OSD Setting	Language	English
	OSD H-Position	0-100
	OSD V-Position	0-100
	OSD Transparency	0-100
	OSD Time Out	5-100
	OSD Rotation	Off/90/180/270
Other	FreeSync	On/Off
	HDR	Auto/On/Off
	MPRT	On/Off
	Power Indicator	On/Off
	ECO Mode	On/Off
	Rest	

Basic parameters

Product Name	27 inches Gaming monitor	
Screen Size	27 inches	
Aspect Ratio	16:9	
Viewing Angle	178°(H) / 178°(V)	
Display Area (H*V)	597.888(H) x 336.312(V)mm	
Contrast ratio	1000: 1 (TYP)	
Colors	16.7M	
Resolution	2560x1440	
Maximum refresh rate	200Hz	
Power specifications	DC 12V --- 4A The standard voltage and current may vary with countries, please refer to the label at the back of the product.	
Tilting angle	Forward titling: 5°±2°; Backward tilting: 15°±2°	
Height range	N/A	
Rotation angle	N/A	
Vertical angle	N/A	
Environmental conditions	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
	Storage	Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)

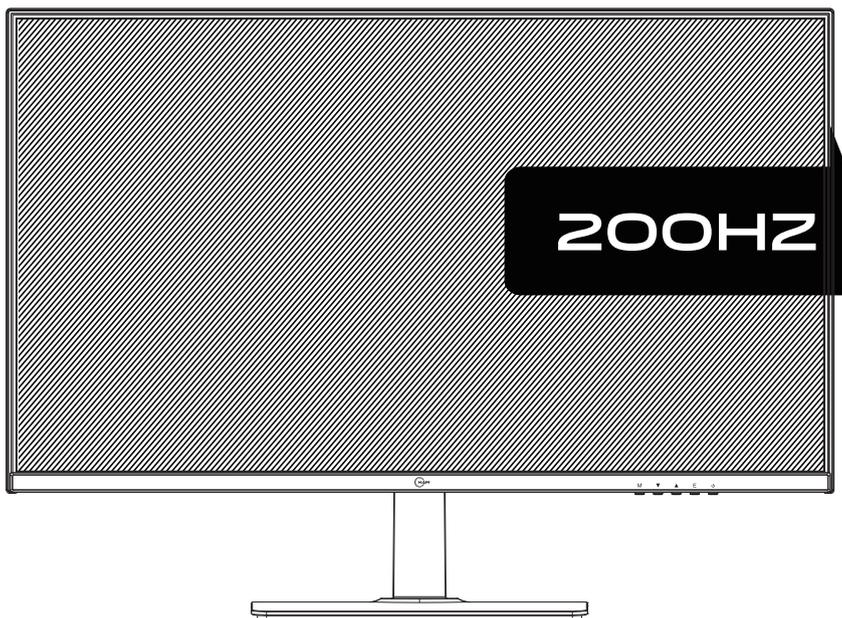

قبل استخدام هذا المنتج، يرجى قراءة ما يلي
دليل المستخدم بعناية واحتفظ به جيداً

- احفظ الشاشة بعيداً عن مصادر المياه أو الأماكن الرطبة، مثل غرف الاستحمام والمطابخ والطوابق السفلية و
أحواض السباحة
- تأكد من وضع الشاشة على سطح مستوي. إذا سقطت الشاشة، فقد يتسبب ذلك في إصابة الإنسان أو تلف الجهاز
- قم بتخزين الشاشة واستخدامها في مكان بارد وجاف وجيد التهوية، واحفظها بعيداً عن مصادر الانبعاثات والحرارة
- لا تقم بتغطية أو سد فتحة التهوية في الغلاف الخلفي، ولا تستخدم المنتج على سرير أو أريكة أو بطانية أو أشياء مماثلة
- تتم طباعة نطاق جهد إمداد الشاشة على الملصق الموجود على الغلاف الخلفي. إذا كان من المستحيل تحديد جهد الإمداد، يُرجى
استشارة الموزع أو شركة الطاقة المحلية
- إذا لم يتم استخدام الشاشة لفترة طويلة، يُرجى قطع التيار الكهربائي لتجنب حدوث صدمة كهربائية في الأيام الممطرة
والتلف بسبب جهد الإمداد غير الطبيعي
- يُرجى استخدام مقبس تأريض موثوق به، ولا تفرط في تحميل المقبس وإلا تسبب ذلك في نشوب حريق أو صدمة كهربائية
- لا تضع مواد غريبة في الشاشة، وإلا فقد يتسبب ذلك في حدوث ماس كهربائي ينتج عنه حريق أو صدمة كهربائية
- لا تقم بفك هذا المنتج أو إصلاحه بنفسك لتجنب حدوث صدمة كهربائية. في حالة حدوث أعطال، يرجى الاتصال ب
خدمة ما بعد البيع مباشرة
- لا تقم بسحب كابل الطاقة أو لفه بقوة
- توجد طبقة مستقطبية (ليست طبقة واقية) على سطح الشاشة. لا تقم بنزعها، وإلا فإن المنتج
قد تتعرض للتلف ويصبح الضمان غير صالح

قائمة التعبئة


- يرجى التحقق من أن عبوة الشاشة تحتوي على جميع الأجزاء. في حالة فقدان أي جزء، يرجى الاتصال بالموزع.
- قد يختلف لون وشكل الأجزاء باختلاف الطرازات. الأرقام الواردة في دليل المستخدم هذا هي للإشارة فقط.
- قد تختلف الأسلاك المزودة مع المنتجات المشتراة. الأرقام الواردة في دليل المستخدم هذا هي للإشارة فقط.



القاعدة




قف

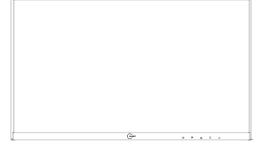


الشاشة



كابل DP

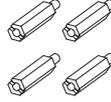

ركب المكونات السداسية الأضلاع × 4 (للتثبيت بالحائط)

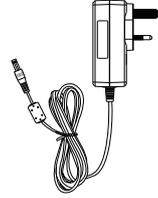

المحول




التعليمات


يمكن استخدام البراغي الزائدة عن الحاجة كبراهي احتياطية.

تركيب القاعدة


1 قم بمحاذاة علامة المثلث الموجودة على العمود مع علامة المثلث الموجودة على القاعدة، ثم قم بتدويره لتركيبه في مكانه الصحيح، كما هو موضح في الشكل.

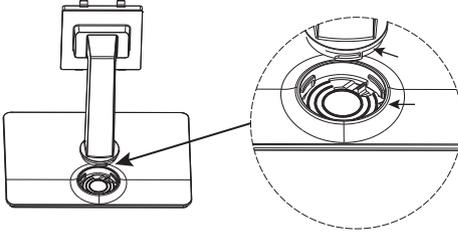

2. M4*10. قم بتثبيت قاعدة الحامل في الحامل باستخدام برغي واحد

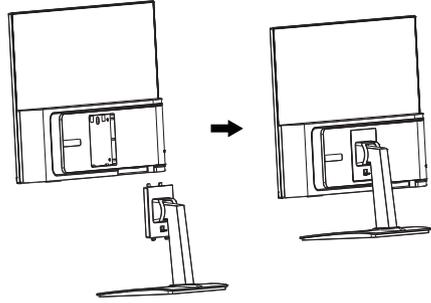


بعد التجميع، ما عليك سوى إمساك الحامل باليد لتثبيت الشاشة في وضع مستقيم

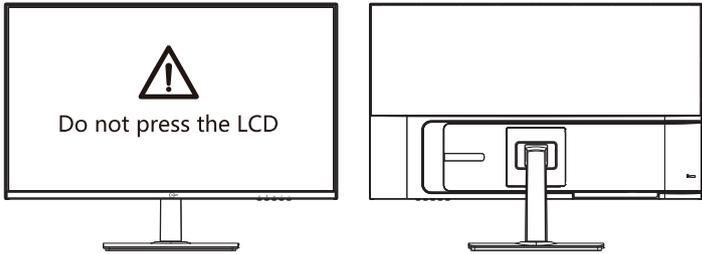

⚠ ملاحظة: أثناء وقوف الشاشة بالكامل، لا تضغط على الشاشة البلورية السائلة باليد لتجنب تلف الشاشة.


تركيب الحامل (اختياري)

1. أخرجي جذع الحامل وقاعدة الحامل . اضغط على زر التحرير لإزالة لوحة الحامل .

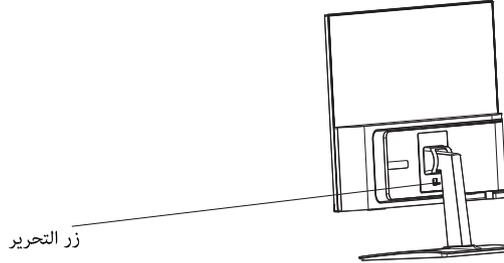


2. احتفظ بالرغوة تحت اللوحة لمنعها من الانكسار. انزع البراغي الأربعة الأصلية.
(1) متصلة بالفتحة الموجودة في الجزء الخلفي من الشاشة
(2) قم بتركيب البراغي السداسية الأربعة في الموضع العلوي و2 في الموضع السفلي

1

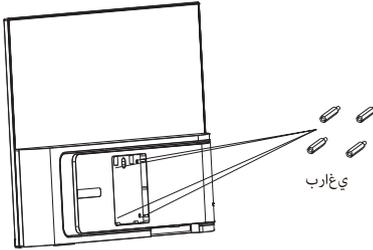


2

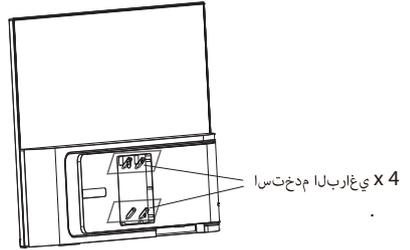


3. اتبع الإرشادات المدونة على حامل الحائط أو أي ملحق مشابه لتثبيت الشاشة عليه .

متباعدة بعض VEsa fixing ملاحظة: يجب أن تحتوي الدعامة الجدارية المتوافقة على فتحات
مم عمودياً وأفقياً. الشيء عن الأخرى من 75x75

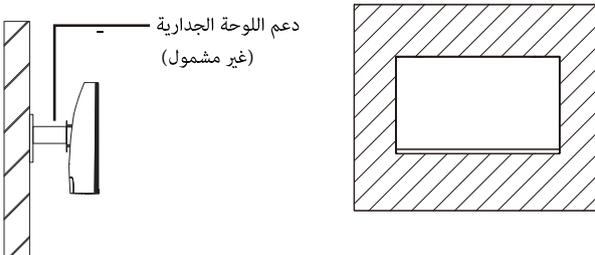


⚠ تنبيه: لتقليل خطر السقوط، قم بتركيب الرف الحائطي بشكل صحيح واتخذ تدابير السلامة على الشاشة لتجنب الإصابة أو التلف. لا تضع أي شيء على حامل الحائط أو تعلق أي شيء عليه. يجب ألا يتجاوز الارتفاع الموصى به لحامل الحائط مترين.

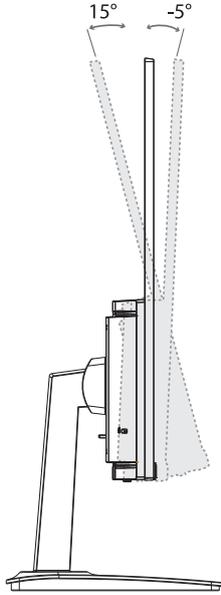

زاوية الميل

$-5.0^{\circ}(\pm 2.0^{\circ}) - +15^{\circ}(\pm 2.0^{\circ})$


وصف الأزرار

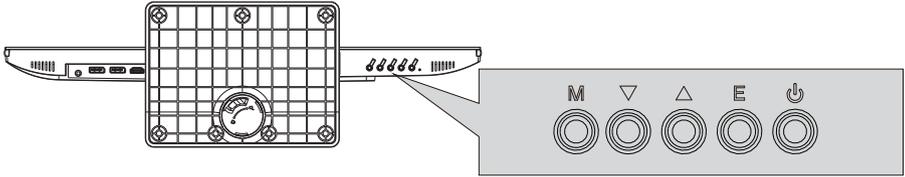

اختصارات لاستخدام الأزرار متعددة الوظائف

مفتاح إضافي	حرك التحديد لأعلى/أدنى (كما يمكنك أيضًا ضبط السطوع)
تصغير المفتاح	نقل التحديد لأسفل/تقليل القيمة (أيضًا كمفتاح التشغيل المتقاطع للعبة)
مفتاح الإغلاق	ارجع إلى قائمة المستوى السابقة أو اخرج من قائمة القوائم التي تظهر على الشاشة (FPS أيضًا كمفتاح اتصال وضع)
القائمة	إفتح القائمة، أو تأكيد الاختيار
زر الطاقة	عشراشرا لي غثرت فباقي إل ق فارب ذق ث بنم ل ا قم ئا ل ا ي ل ع ط غ ض ا

تفسير المؤشرات

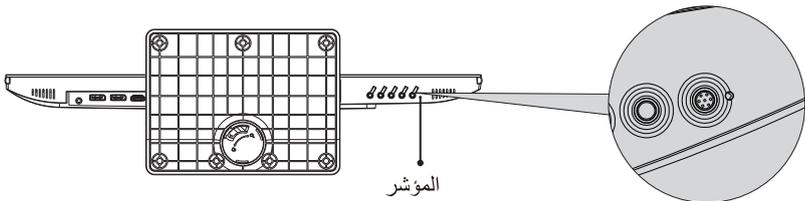


المؤشر: يشير الضوء الأزرق الثابت إلى أن الطاقة قيد التشغيل وأن الشاشة تعمل بشكل طبيعي. يشير الضوء الأحمر الثابت إلى عدم وجود مصدر فيديو وإلى عدم اكتشاف إشارة أفقية أو عمودية أو انخفاض الجهد. يرجى التأكد من تشغيل الكمبيوتر ومن إدخال و/أو توصيل كافة كبلات الفيديو بالكامل.

توصيل الكابل

يختلف تكوين الواجهة السفلية في الجزء الخلفي من الشاشة باختلاف المنتجات.


ملاحظة: في حالة تلف كابل الطاقة أو كابل الإشارة، يجب استبداله بكابلات ناعمة خاصة أو مكونات خاصة يتم شراؤها من قسم التصنيع أو الصيانة.

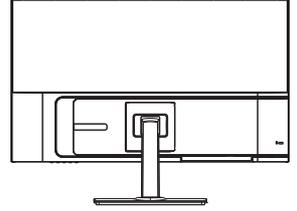

HDMI واجهة




واجهة DP

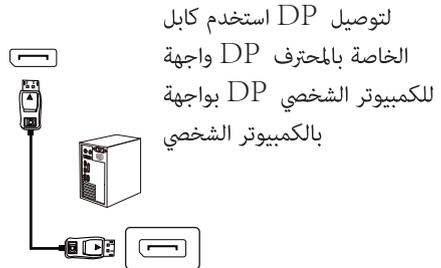

Power Adapter




مخرج الصوت

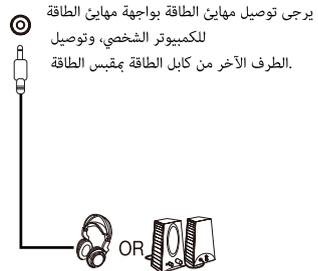

وصف القائمة

- للكمبيوتر الفعلي مختلفاً قليلاً عن تلك الموضحة في الشكل OsD قد يكون لون وشكل قائمة
 - مع إدخال تحسينات على الوظائف دون إشعار مسبق OsD قد تتغير مواصفات قائمة
- لضبط إعدادات الشاشة وتظهر على الشاشة بعد تشغيل الشاشة (OsD) يمكن استخدام قائمة عرض الشاشة M. تشغيل الشاشة والضغط على الزر

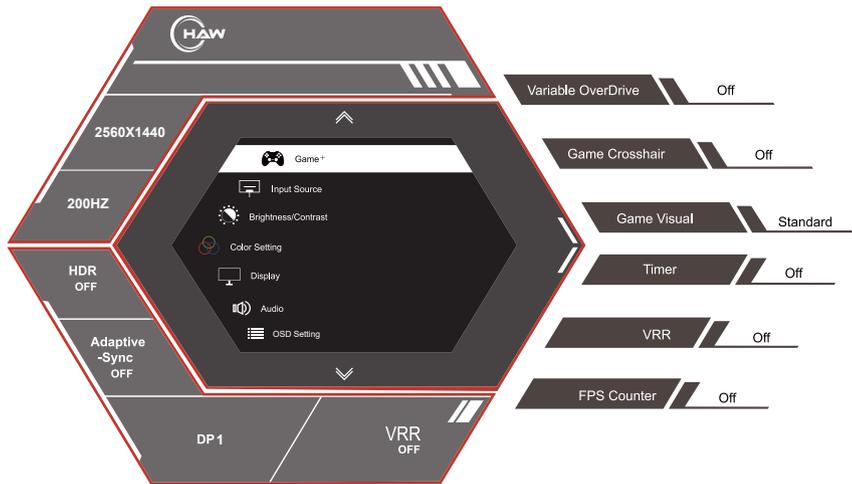

رذ	ةفي طولا
1	ةي عرف ال مئ او قل ال ل ا خ د و ة ش را ش ل ال ع ة و ر ع م ال ت ا ر ا ي خ ل ا ة م ئ ا ق ض ر ع ل ر ز ل ا ا ذ ه ال ع ط غ ض ا : ة م ئ ا ق ال ا
2	مئ او قل ال ي ف ل ف س ا ل ك ر ح ت ل ل ط غ ض ا : ل ف س ا
3	مئ او قل ال ي ف ال ع ا ك ر ح ت ل ل ط غ ض ا : ال ع ا
4	ة ش را ش ل ال ع ة و ر ع م ال ت ا ر ا ي خ ل ا ة م ئ ا ق ن م چ و ر خ ل ل ر ز ل ا ا ذ ه ال ع ط غ ض ا : چ و ر خ
5	ا د ل ي غ ش ت ف ا ق ي و ا ة ش را ش ل ل ي غ ش ت ل ل ط غ ض ا : ل ي غ ش ت ل ل

- تختلف وظائف الشاشة باختلاف الموديلات، والوظائف الواردة في هذا الدليل هي للرجوع إليها فقط

إيقاف التشغيل/عالية/متوسطة/منخفضة	المحرك الزائد المتغير	+ اللعبة
إيقاف التشغيل/وضع الإيقاف 1/الوضع 2/الوضع 3	لعبة تقاطع الشعاع المتقاطع	
قياسي/فيلم/فيلم سينمائي/لعبة/تقمص الأداة/لعبة تقمص الأداة/منظور من منظور الشخص الأول/مكتب المدقق/قارئ	لعبة بصرية	
من 90/60/50/30/30	المؤقت	
تشغيل/إيقاف تشغيل	VRR	
تشغيل/إيقاف تشغيل	عداد FPS	
تشغيل/إيقاف تشغيل	تعزيز الظل	
	DP	
	DP	
	HDMI	
	HDMI	مصدر الإدخال
0-100	سطوع	
0-100	معادل الأسود	
0-100	تباين	السطوع/التباين / التباين /
تشغيل/إيقاف تشغيل	DCR	
1.8/2.0/2.2/2.4/2.6	جاما	
دافن/إعادي/بارد/مستخدم	درجة حرارة اللون	إعداد الألوان
0-100	تدرج الألوان	
0-100	تشبع	
0-100	ضوء أزرق منخفض	
0-100	حدة	
شاشة عريضة / 4:3 / 1:1 / سيارات	نسبة العرض إلى الارتفاع	العرض
تشغيل/إيقاف تشغيل	كتم الصوت	الصوت
0-100	الحجم اللغة	
0-100	OSD موضع نظام التشغيل-H	OSD إعداد
0-100	V موضع وضع	
0-100	شفافية إدارة دعم العمليات	
5-100	OSD وقت انتهاء صلاحية	
أوف/180/90/270	OSD دوران قرص	
تشغيل/إيقاف تشغيل	المزامنة الحرة	أخرى
تشغيل/تشغيل/إيقاف تشغيل تلقائي	HDR	
تشغيل/إيقاف تشغيل	MPRT	
تشغيل/إيقاف تشغيل	مؤشر الطاقة	
تشغيل/إيقاف تشغيل	وضع ECO	
	إعادة تعيين	

اسم المنتج	شاشة ألعاب بحجم 27 بوصة	
حجم الشاشة	بوصة 27	
نسبة العرض إلى الارتفاع	16:9	
زاوية المشاهدة	درجة مئوية (ح) / 178 درجة مئوية (ت) 178	
(H ⁰ V) مساحة العرض	مليمتر 597.888(H)X336.312(V)	
نسبة التباين	(نموذج) 1000:1	
الألوان	16.7M	
القرار	2560x1440	
الحد الأقصى لمعدل التحديث	هرتز 200	
مواصفات الطاقة	فولت 4 ~ DC 12 قد يختلف الجهد والتيار القياسيان باختلاف البلدان، يرجى الرجوع إلى الملصق الموجود خلف المنتج	
زاوية الميل	°إمالة للأمام 15 ± °2؛ الإمالة للخلف: 5 ± 2	
نطاق الارتفاع	غير متوفر	
زاوية الدوران	غير متوفر	
الزاوية الرأسية	غير متوفر	
البيئة الشرط	الإجراء	درجة الحرارة: 0 درجة مئوية إلى 40 درجة مئوية (32 درجة فهرنهايت إلى 104 درجة فهرنهايت) الرطوبة: 10% ~ 90% رطوبة نسبية (بدون تكاثف)
	التخزين	درجة الحرارة: 20- درجة مئوية إلى 60 درجة مئوية (-4 درجة فهرنهايت إلى 140 درجة فهرنهايت) الرطوبة: 5% ~ 95% رطوبة نسبية (بدون تكاثف)



深圳市微领客科技有限公司

料号： 210-27N11R-002004

名称： 说明书

版本： V1 日期： 20251127

技术要求：

- 1、 80g书写纸
- 2、 尺寸： 140x210mm；
- 3、 单黑印刷， 骑马钉；
- 4、 不得有缺页， 漏印， 字迹模糊；
- 4、 符合RoHS标准。